

Thank You!

Your purchase is greatly appreciated and we hope you enjoy Everwine. We invite you to write an Amazon product review which helps our small Seattle business grow and other customers find a good product.

If you are unhappy with Everwine, reach out to us at support@stonevaleproducts.com



**Air Valve &
Release Button**

Grip


Spout

Locking Collar

Air Pump

Expander

Opening

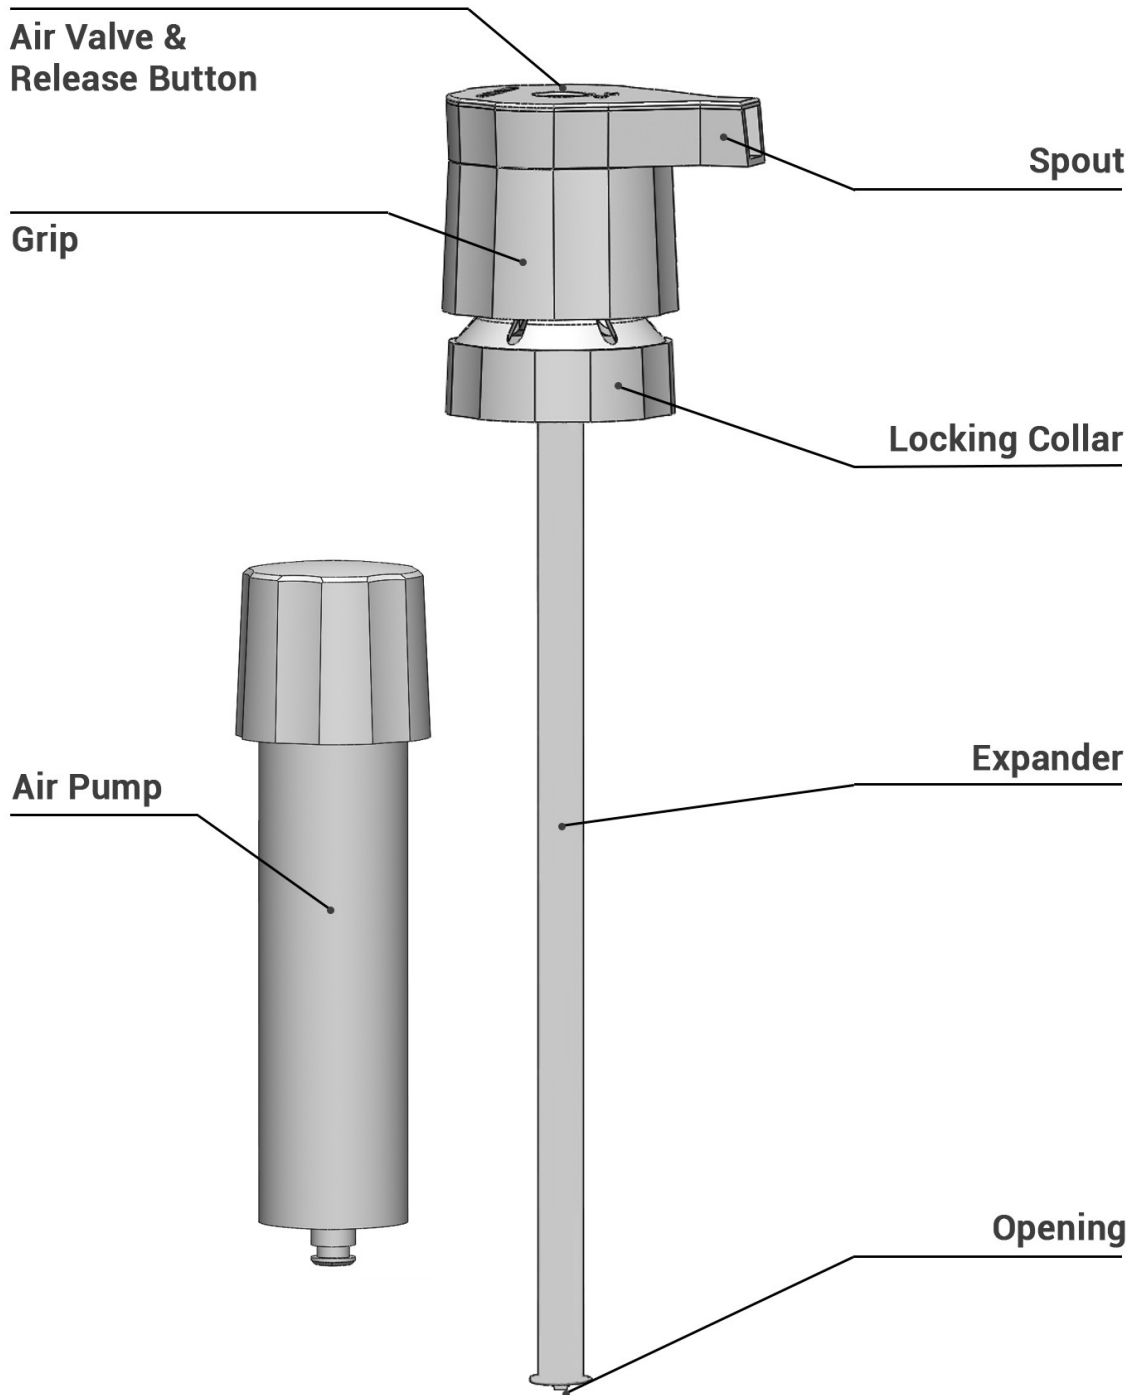

EVERWINE QUICK START GUIDE

Watch our How to Video on our Customer Support page:



PREPARATION: Remove the foil capsule from the wine bottle. For a new bottle, pour at least 2 ounces of wine before installing Everwine otherwise it will overflow.

INSTALL: Slide the Locking Collar over the bottleneck. Insert Everwine into the bottle.

While gripping the cap, screw the Locking Collar into the Cap until you feel a little resistance then pull down on the Locking Collar while finishing tightening for better clamping of the bottle. If you can easily twist the grip while holding the bottle, the Locking Collar isn't tight enough.

Open the Spout with a short, counter-clockwise turn. Insert the Pump into the air valve on top of the cork. Pump slowly to raise the surface of the wine. You should hear air venting through the Spout. When the surface of the wine is an inch from the bottle opening (before wine pours out!), close the Spout with a short, clockwise turn. After several more pumps, point the spout into a glass and briefly open and close the Spout to vent the air left in the bottle.

Press the button on top to release the pressure in the bottle. Your wine is ready to store.

AERATE and POUR: With the Spout in the closed position (a clockwise turn), pressurize the bottle with 6 pumps or until it's difficult to pump (a less full bottle requires more pumping). Open the Spout into a glass to aerate and pour the wine under pressure. If the flow slows down, close the Spout and add more pumps for faster pouring. If the flow abruptly stops, the bottle is almost empty so proceed to the REMOVAL procedure below.

Press the button on top to release the pressure in the bottle. Your wine is ready to store.

REMOVE: If you are ready to remove the Everwine System and/or the wine abruptly stopped flowing, press the button on top to release the pressure in the bottle. Open the Spout with a short, counter-clockwise turn then press and hold the button again to completely deflate the expander.

Unscrew the Collar from the Cap. While holding down the button on top, slowly walk out (side-to-side motion) the cork from the bottle. Remove the Collar from the bottle.

NOTE: If at anytime you want to restart the INSTALL process, press the button on top to release the pressure in the bottle. Open the Spout with a short, counter-clockwise turn then press and hold the button again to deflate the expander. You can now rejoin the INSTALL procedure at "Open the Spout with..." above.

FAQs

Q1: How do I unbunch the black rubber layer and/or I can see clear plastic at the tip? With clean hands, hold the black layer nearest the cap end between your fingers. Then with your other hand, gently slide the black layer towards the tip so it unbunches and the plastic returns inside.

Q2: What's the best way to reinstall the bottle seal? Place the cork on a flat surface with the expander pointing up. As you place the bottle seal over the tip of the expander, 4 circles on the seal should face up towards you before installing it. With two chopsticks, carefully push the seal down into the white recess of the cork body.